

65 Redding Rd. Unit 874  
Georgetown, CT 06829  
Phone: 203-659-0456  
FAX: 203-549-0409  
E-Mail: [info@TRASSIG.COM](mailto:info@TRASSIG.COM)  
Web: [www.TRASSIG.com](http://www.TRASSIG.com)



# Trassig

“The Playground People”

## Wear Layer Patch Kit


Visit [Pouredin.com](http://Pouredin.com) for an instructional video!

Enclosed in this package (For Each Patch Kit):

- 10 pounds of EPDM granules. (2) 5lb bags
- 2 pounds of Aromatic Binder. (1) Metal Container

This is enough to patch 4 square feet of wear layer at a depth of 0.5”

You will need the following:

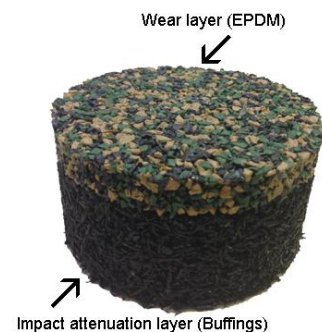

Follow these steps to patch your surface:

- ✓ Make sure you pick a dry day to patch.
- ✓ Using a sharp utility knife, create a clean cut around the area you would like to patch. When cutting the area, make sure to cut the edges of the area at a 45-Degree angle. This will create a stronger bond at the edges of the patch.
- ✓ Clean the area of all loose granules and debris.
- ✓ Pour the entire content of the package (First the granules, then the binder) in a plastic pail that you plan to dispose of later.
- ✓ Mix the content thoroughly. Make sure that all the granules are coated evenly with the binder
- ✓ Using a rounded trowel spread the mix onto the area you are patching.
- ✓ Use a mixture of water and liquid hand soap in a bottle sprayer to lubricate the trowel after each pass.
- ✓ Secure the area and let cure for 24 to 48 hours.