

65 Redding Rd. Unit 874
Georgetown, CT 06829
Phone: 203-659-0456
FAX: 203-549-0409
E-Mail: info@TRASSIG.COM
Web: www.TRASSIG.com



Trassig

“The Playground People”


Base Layer Jumbo Patch Kit

Enclosed in this package (For Each Jumbo Patch Kit):

- 40 pounds of SBR buffings. (2) 20lb bags
- 8.39 pounds of Aromatic Binder. (1) Metal Container

This is enough to patch approximately 20 square feet of base layer at a depth of 2”

You will need the following:

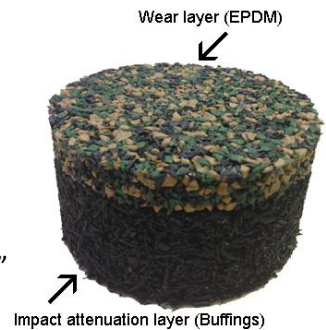

Follow these steps to patch your surface:

- ✓ Make sure you pick a dry day to patch.
- ✓ Using a sharp utility knife, create a clean cut around the area you would like to patch.
- ✓ Clean the area to be fixed of any debris.
- ✓ Pour the entire content of the package (First the buffings, then the binder) into the plastic-lined wheelbarrow.
- ✓ Mix the content thoroughly. Make sure that all the buffings are coated evenly with the binder.
- ✓ Using a rounded trowel spread the mix onto the area you are patching.
- ✓ Use a mixture of water and liquid hand soap in a bottle sprayer to lubricate the trowel after each pass.
- ✓ Let cure for at least 24 hours before you apply the wear layer.