


## Wear Layer Jumbo Patch Kit

Enclosed in this package (For Each Jumbo Patch Kit):

- 40 pounds of EPDM granules. (2) 20lb bags
- 8.39 pounds of Aromatic Binder. (1) Metal Container

This is enough to patch approximately 20 square feet of wear layer at a depth of 0.5"

You will need the following:

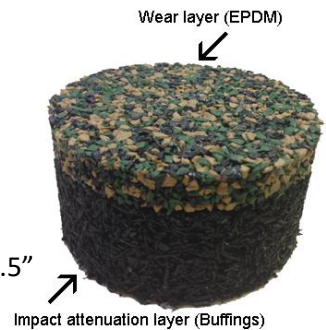

Follow these steps to patch your surface:

- ✓ Make sure you pick a dry day to patch.
- ✓ Using a sharp utility knife, create a clean cut around the areas you would like to patch. When cutting, make sure to cut the edges of the area at a 45-Degree angle. This will create a stronger bond at the edges of the patch.
- ✓ Clean the area of all loose granules and debris.
- ✓ Lay a contractor bag inside the wheelbarrow and tape the edges to the rim.
- ✓ Pour the entire content of the package (First the granules, then the binder) into the plastic-lined wheelbarrow.
- ✓ Mix the content thoroughly. Make sure that all the granules are coated evenly with the binder.
- ✓ Using a rounded trowel spread the mix onto the area you are patching.
- ✓ Use a mixture of water and liquid hand soap in a bottle sprayer to lubricate the trowel after each pass.
- ✓ Secure the area and let cure for 24 to 48 hours.