

How to use Trassig's Rebinder™

You will need the following materials:

leaf blower, tarp or cardoard, drip pan, paint roller

Look for a sunny day above 60 degrees. If it is going to rain within a four hours after applying, do not rebind.

Warning: The surface must be completely dry before you use the Rebinder.

A note about Rebinder coverage: As a rule of thumb, one pail should cover about 1,000 sf if you have been maintaining your surface well. This formula will be wildly affected by how loosely troweled your surface is and the last time you rebinded. Don't try to stretch out the pail to cover all your surface. Follow the instructions below. If you run out, you can always get more pails. Not applying enough rebinder on your wear layer will greatly affect the outcome. If you are not sure about coverage, please give one of our poured in experts a call at: 203-659-0456 or email us at info@trassig.com




Step 1: Use a leaf blower to remove loose granulated rubber and other debris from area. If necessary, use a power washer with a wide angle nozzle and binder friendly detergent to sanitize the surface. Make sure your surface is COMPLETELY dry before continuing. Check under equipment for possible excess water and moisture




Step 3: Pour Rebinder™ into drip pan. Do not mix with other products or solvents.




Step 4: Use a cheap paint roller to equally distribute Rebinder™ on your poured in place surface because you will be throwing it away after installation.

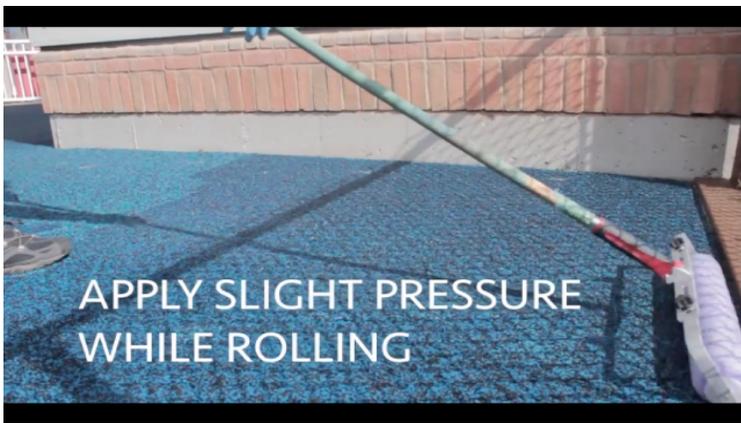


Step 5: Apply pressure when applying Rebinder™ in order to make sure the coat is even and sufficient. Go over each area only one time. Do not treat Rebinder™ like paint. Multiple layers will harden your surface.

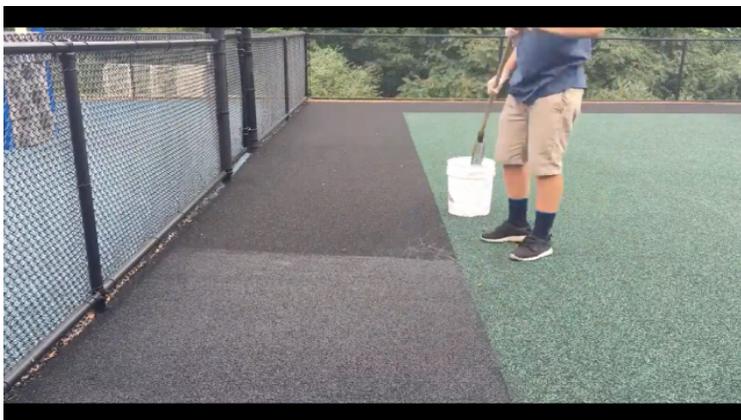

Step 6: Even though Trassig's Rebinder™ is fast curing, secure area and allow 24 hours before use after application. If it rains 4 hours or more after application the Rebinder™ will not be affected, but it cannot rain during the application of the Rebinder™ for it to properly cure.

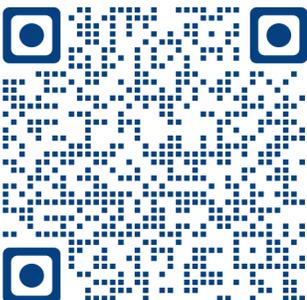

Scan this QR code to watch a video on how to install the Rebinder

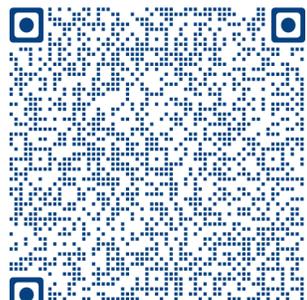

Scan this QR code to print the Rebinder SDS Sheets